



# BRAILLEX EL 60c

Inspiration  
at your Fingertips

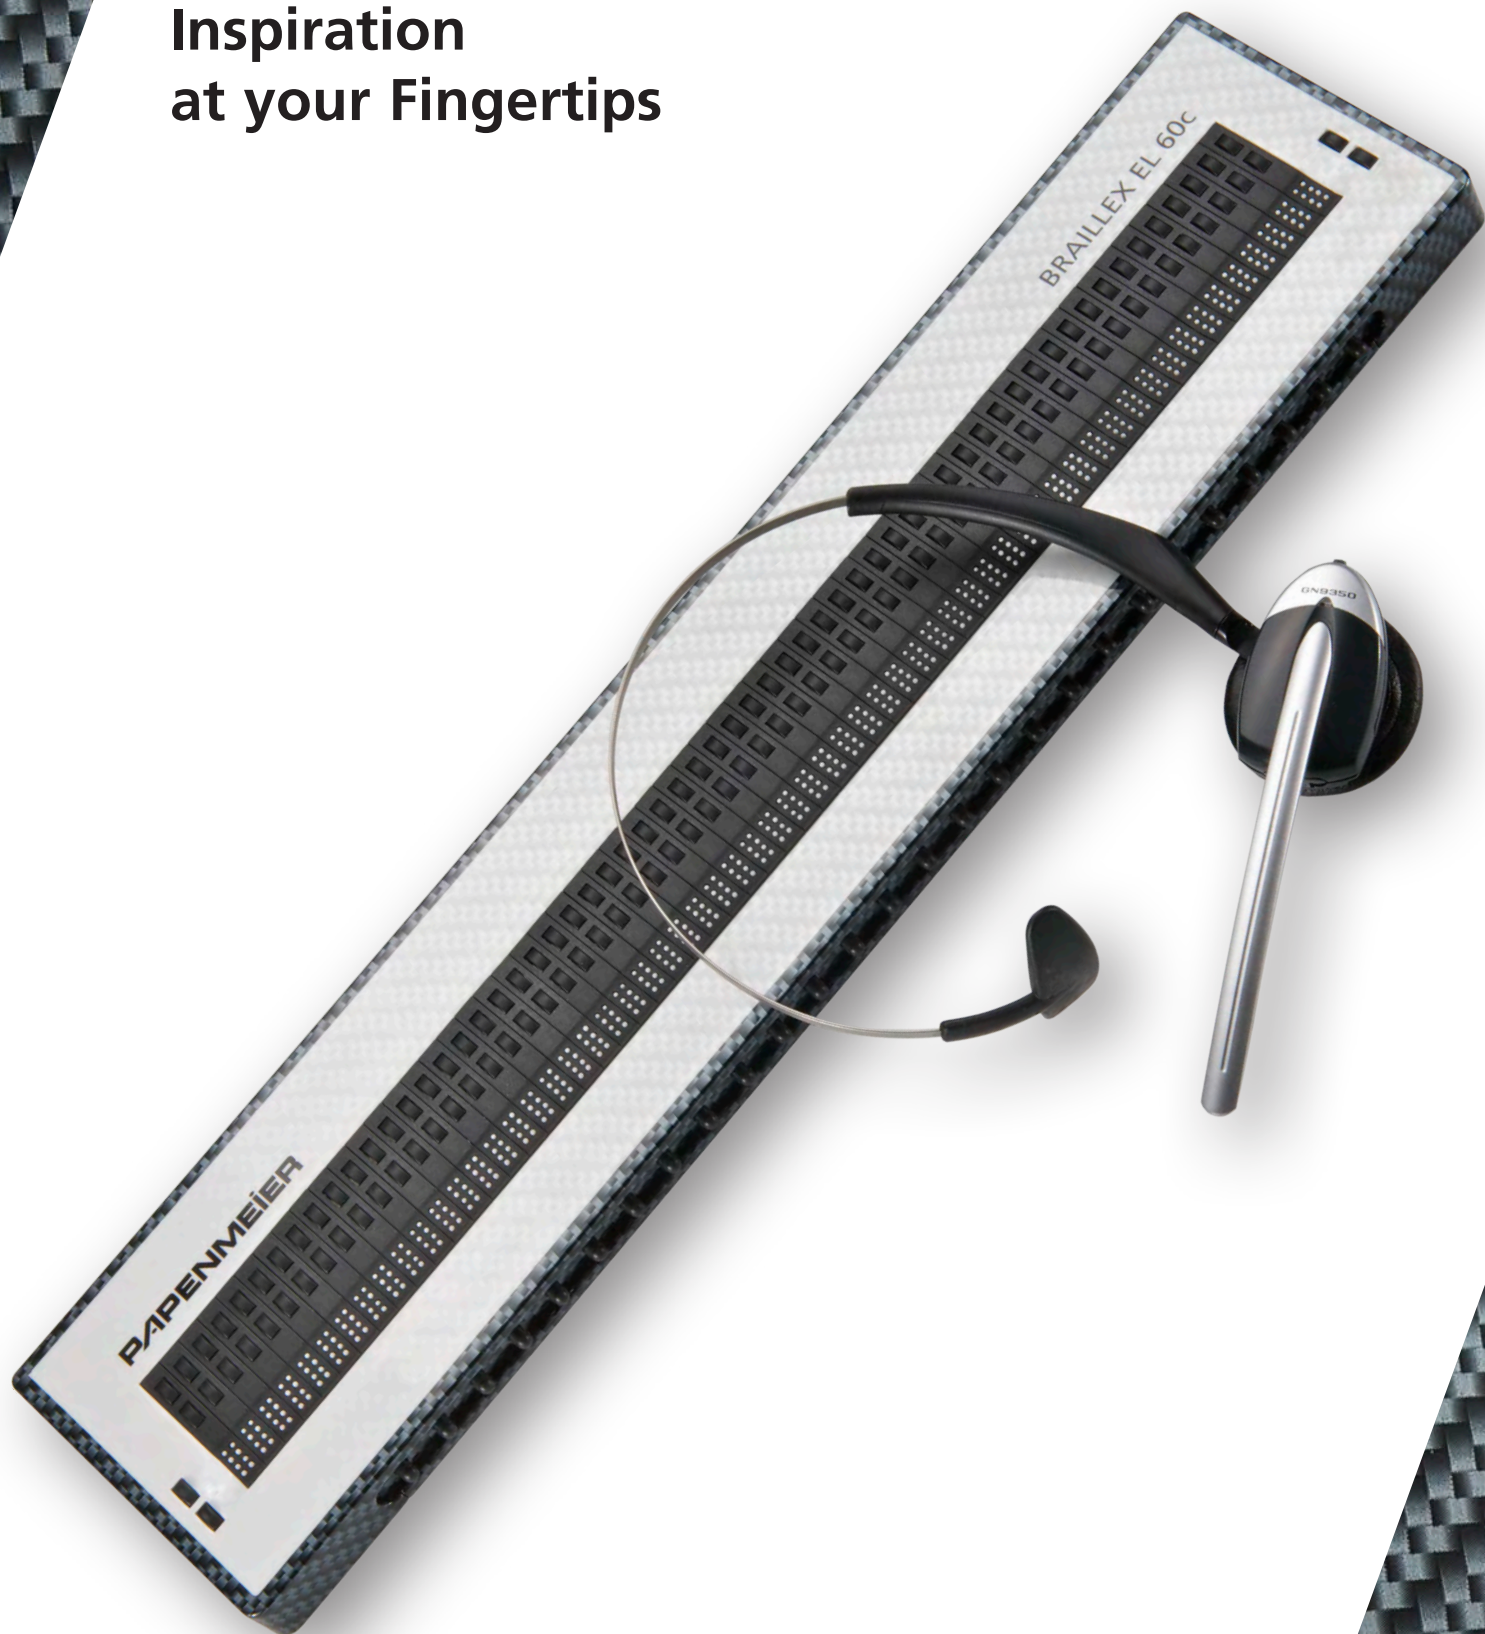

**PAPENMEIER**

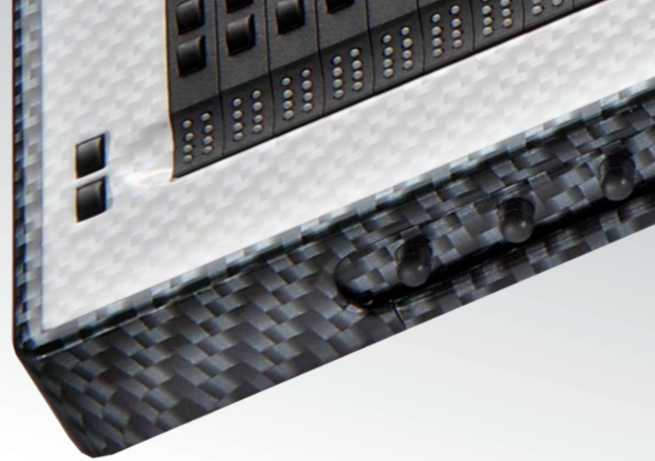

## **BRAILLEX EL 60c**

### **Inspiration at your Fingertips**

BRAILLEX EL 60c combines efficiency and touchably elegant design. Enjoy the new Braille display BRAILLEX EL 60c, which will soon be a common daily sight at your working place. Discover our well thought-out and stylish solution which integrates perfectly into the existing job environment.

#### **Ergonomic work**

While reading, wrist strains are reduced because the device is no higher than 18 mm. Therefore, a relaxed reading position is guaranteed.

#### **Comfortable one-handoperation**

The patented Easy Access Bar ensures an intuitive, fast and safe operation. It is a long single lever (like a space bar) situated on the front side of the device, all along the Braille display, which can be moved in four directions. Thus, you navigate back and forth, up and down on the Braille display safely and easily from every place in a document without ever taking your fingers off the reading position.

#### **Modular operating concept**

Work with your new BRAILLEX EL 60c effectively after only a short period of practice. The modular operating concept enables beginners like people who become blind in adult life to access the Braille display without any difficulties.

Experienced users and persons who have been blind since birth enjoy the additional functionalities in 'advanced mode'.

#### **More productive work with double routing keys**

Increase your working speed and frequently performed actions using the double routing keys integrated into each cell. The lower routing key activates cursor / mouse routing. Use the upper routing key to activate object-related context menus.

The new function 'Easy-Quick-Access-Keys' enables the user to open individual programs or other applications with a single keystroke without activating the regular Windows start menu.

#### **Safe and fast Braille reading**

Profit from the high quality of Papenmeier Braille cells during your daily work and read documents precisely and quickly. Make your choice whether your BRAILLEX EL 60c should come with concave or flat cell caps.

For Braille learners, we recommend the concave cells formed to follow the curve of your fingertips.

#### **Find out for yourself!**

Phone +49 (0)2304 946-0 – or visit our homepage [www.papenmeier.de](http://www.papenmeier.de)

#### **Highlights:**

- flawless work: 60 high quality Braille cells with integrated double routing keys to control cursor and mouse
- quick to learn due to modular operating concept
- one-handoperation through the patented Easy Access Bar
- pleasant reading experience by setting the firmness of the Braille dots
- relaxed reading position because of slim display height

#### **Size (WxDxH) / weight:**

426.5 x 92.5 x 18 mm / 910 g

#### **Ships with the following components:**

- BRAILLEX EL 60c
- drivers for JAWS 32/64 bit, SuperNova, Window-Eyes
- reference guide
- USB connection cable

# **PAPENMEIER**

F.H. Papenmeier GmbH & Co. KG • Reha Division • Talweg 2 • 58239 Schwerte, Germany Phone: +49-2304-946 0  
Fax: +49-2304-946 246 • [info.reha@papenmeier.de](mailto:info.reha@papenmeier.de) • [www.papenmeier.de](http://www.papenmeier.de)